

AirCheckup™ AC-7

Air Quality Indicator Cards For Mission Critical Environments

INSTRUCTIONS

Kit Contents: 1 calibrated air sampler with two air particle indicators, instructions and postage-paid sampler return mailer.

Scope

This kit provides visual monitoring of airborne particles. Contamination indicators darken when exposed to particulate contamination. Kit price includes lab report with the following test parameters*:

- Air Particles (ISO 14644-1:2015)
- Air Particle Metrics

Recommended Test Period: 30 - 365 days or until there is a visible discoloration of the particle indicators.

* For more information including a sample test report see aircheckup.com.

Use of this product subject to TERMS at www.aircheckup.com
Manufactured by:
Technology Care LLC
Birmensdorferstrasse 467
8055 Zurich, Switzerland
Tel. 044 450 85 60, Email: contact@technologycare.com,
© Technology Care LLC - All rights reserved - Intl. Patents Pending



Test Start

2

Stick the sampler to a vertical surface where it will not be disturbed or touched such as a wall, pillar or rack. Can also be mounted inside racks, cabinets and air ducts.

1

Write the "Start Date" on the sampler.

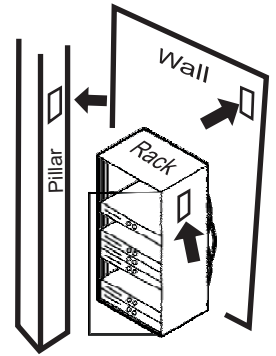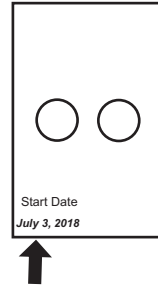


Test End


2

1

Slowly rotate sampler to remove. Do not pull since this could damage painted surfaces. Rub to remove remaining adhesive.

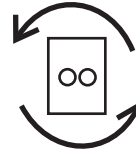

Write the "End Date" on the sampler and fill in the information on the back of the return mailer

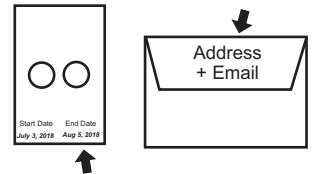

3

Seal sampler in sampler bag and send to our laboratory with the postage-paid mailer. The lab report will be sent to your email address. Please allow up to 10 days for shipping and processing.