

AirCheckup™ Air Quality Indicator Card

INSTRUCTIONS

Kit contents: 1 indicator card, instructions and postage paid return mailer for optional laboratory processing.

Function: The card is equipped with one or more indicators that darken if exposed to air contamination.

Monitors air quality for up to one year.

Optional laboratory report serves as a legal document when measuring air quality or assessing insurance damages caused by contamination events. To order, check one or more tests on the back of the return mailer and send to our lab. We will email you an invoice and send the lab report after receiving payment. For more information please visit aircheckup.com or contact us.

Use of this product subject to TERMS at www.aircheckup.com
Manufactured by:

Technology Care LLC
Birmensdorferstrasse 467
8055 Zurich, Switzerland
Tel. 044 450 85 60, Email: contact@technologycare.com

© Technology Care LLC - All rights reserved - Intl. Patents Pending


Test Start

1

Write the start date/time on the back of the return mailer..

2


Stick the sampler to a vertical surface where it will not get wet such as a wall, pillar.

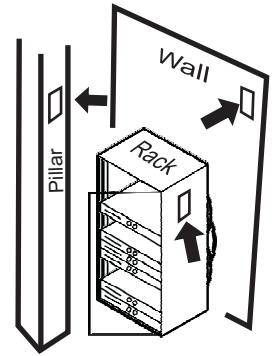

Test End


1

Slowly rotate sampler to remove. Do not pull since this could damage painted surfaces. Rub to remove remaining adhesive.

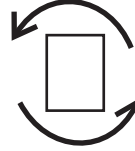

2

Write the end date/time and other information on the back of the return mailer.

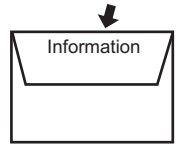

3

Seal sampler in sampler bag and send to our laboratory with the postage-paid mailer.